


# Tutorial set up Orbiter 500 + 270 superflat camera seat



1. Orbiter at the spot  
all parts in 1 trolley

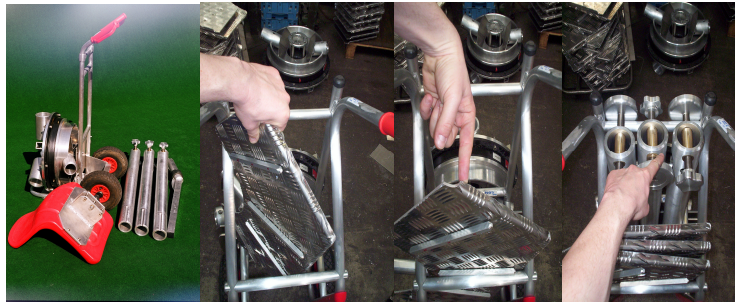


2. Remove all parts except for the bearing  
**Note:** Platform should only be removed when legs are removed



3. Use the trolley as  
lever to flip central unit




4. Release by pushing towards wheels  
Put away trolley

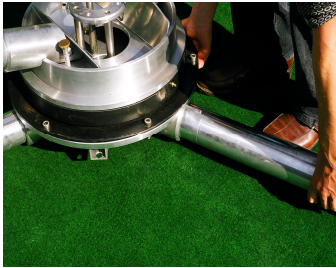


5. Introduce the legs until minimum  
check mark or further NO LESS!



6. Mount 3-part platform until it sticks  
between base plate and bushings  
Close all 3 fixing threads bottom side

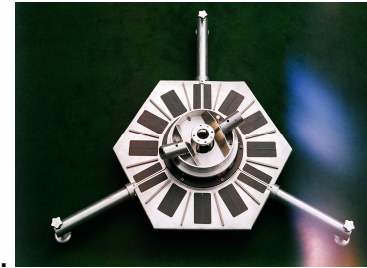

7. Check stability of platform

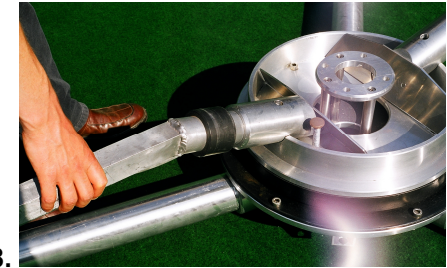

8. Introduce seat arm completely  
Close thread




9. Mount seat and fasten at desired position  
New models with tread at upper side



10. Feed cable into any leg or connect cable  
directly to camera



10a. Feed cable through centre and connect  
to camera allowing min. 180° pan each direction

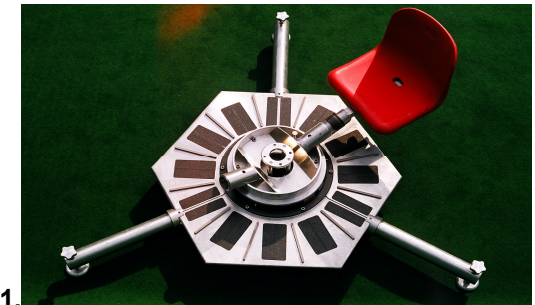

11. Set-up now ready for mounting head or  
camera riser adaptor | level with bubble of head

**Notes:** Depending on operator the platform can be used it works also perfectly without | Use of central cable feeding enhances working comfort | Introduce legs as described by 5. no less!  
Do all set up steps backwards for transport: pick up central unit with trolley, put in platform parts before legs, put in seat arm in one of leg tubes, put in seat, close straps